

20090222000

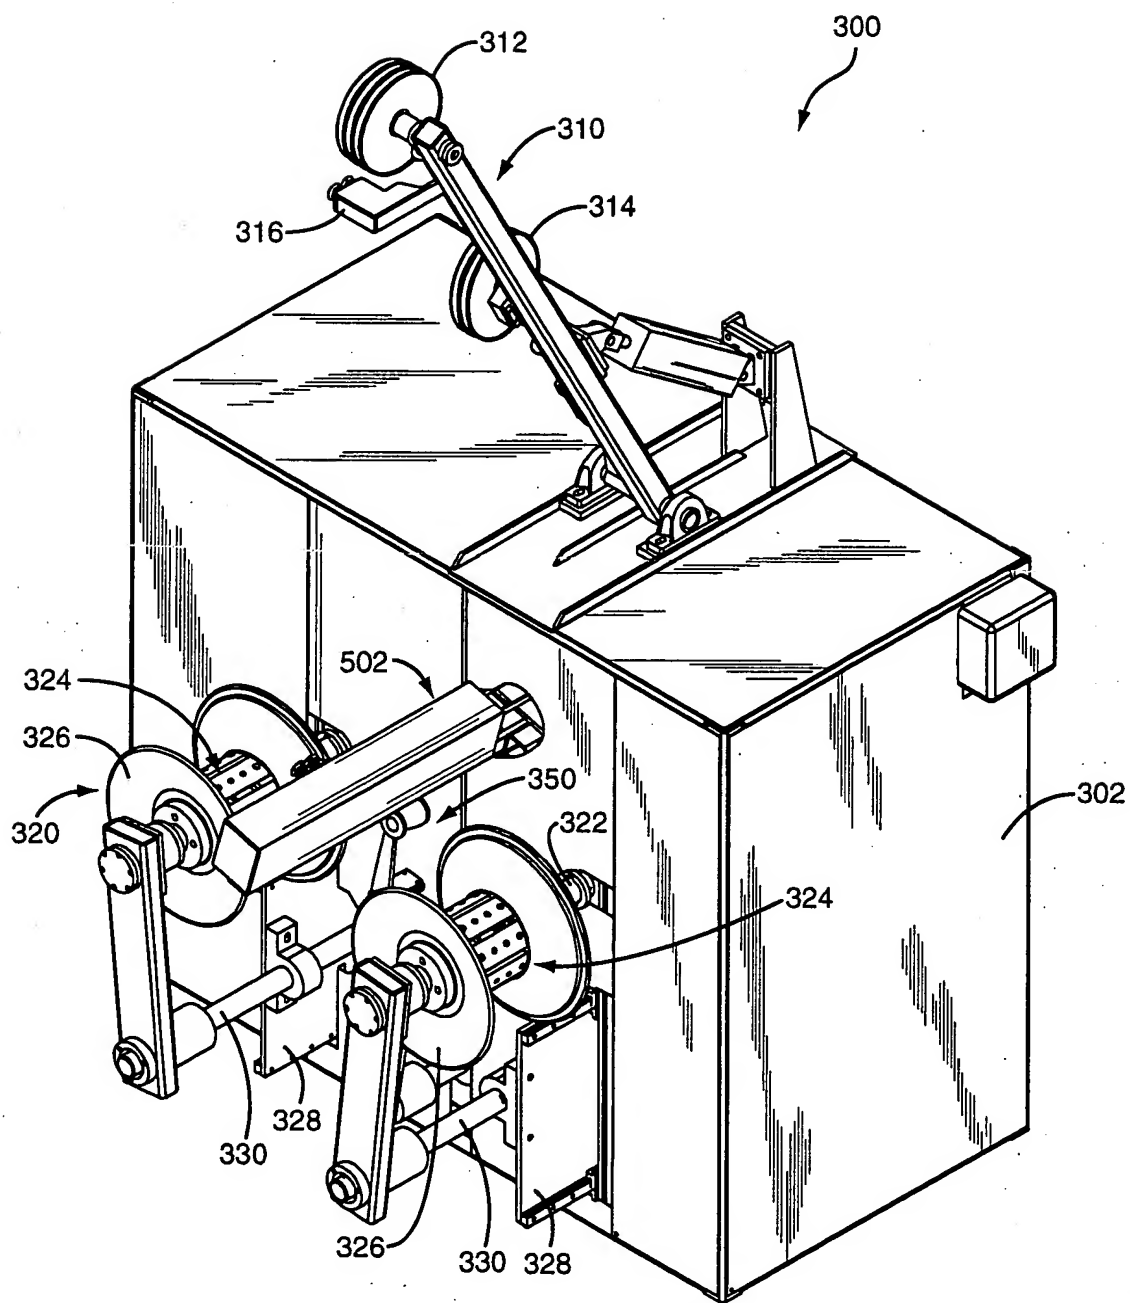 


FIG. 2

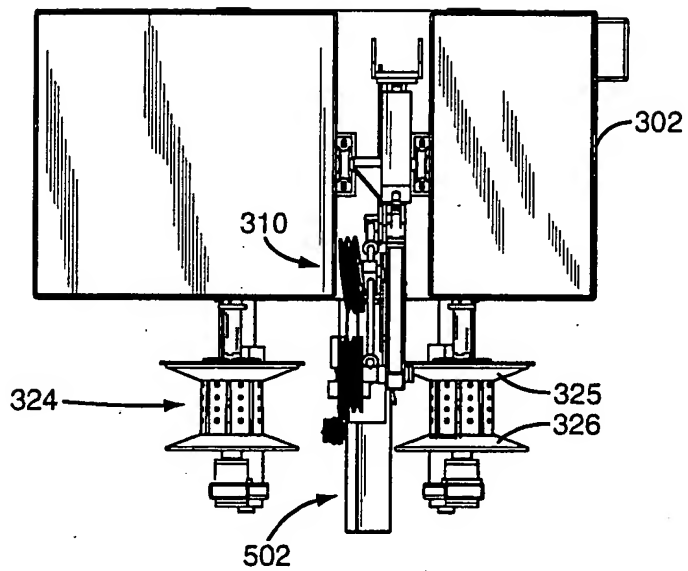 


FIG. 3A

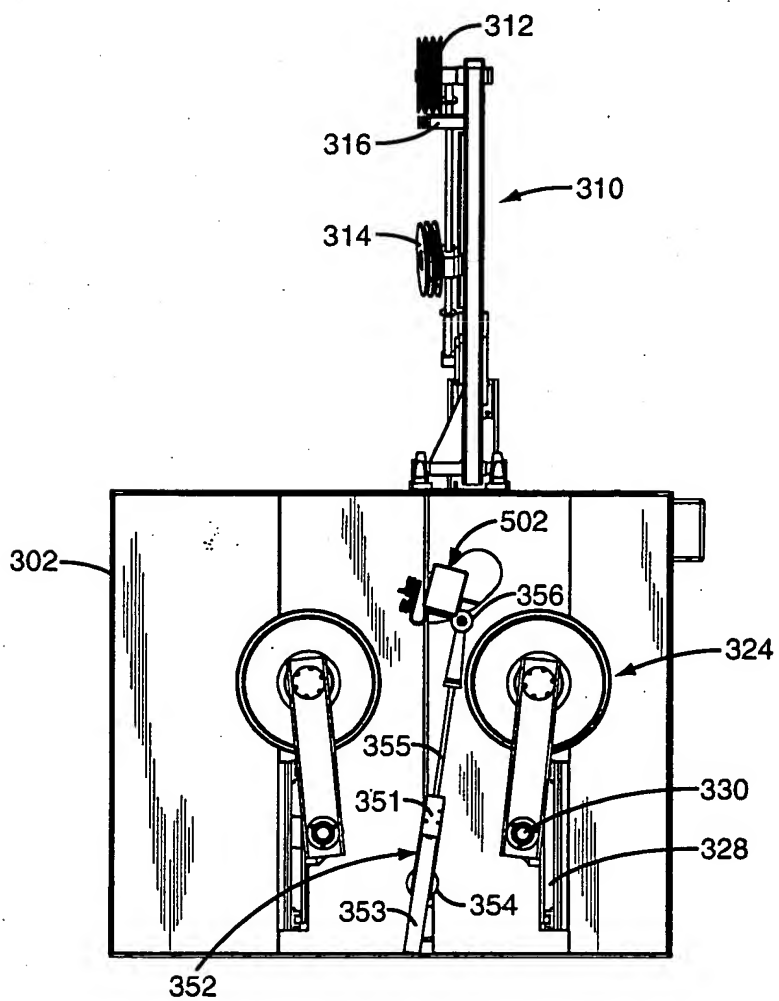 


FIG. 3B

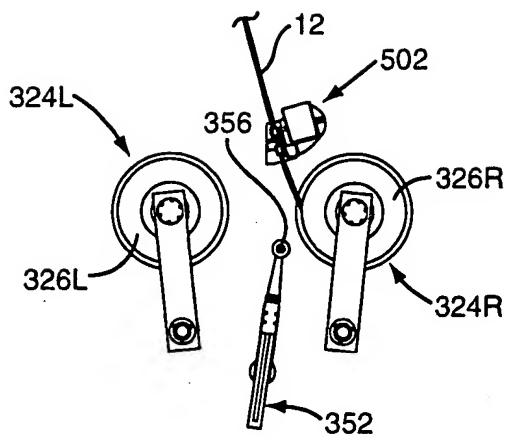 


FIG. 4A

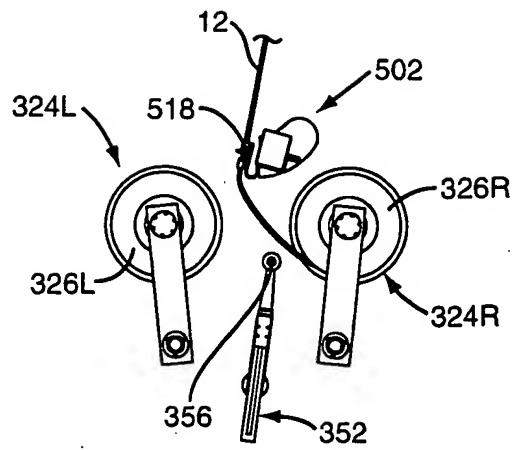 


FIG. 4B

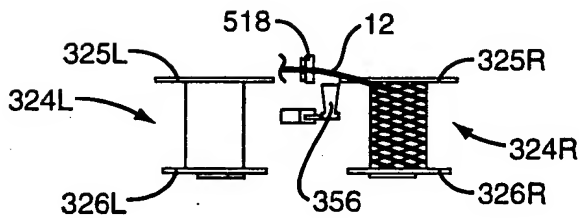 


FIG. 4C

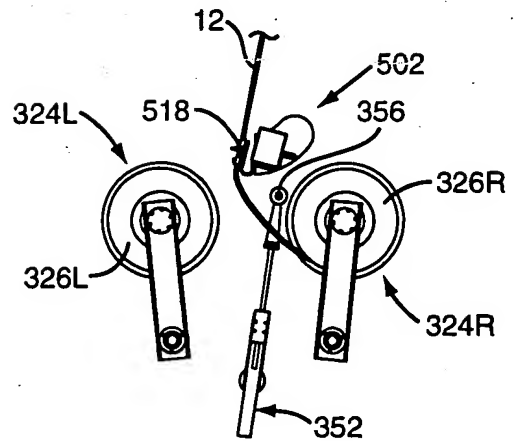 


FIG. 4D

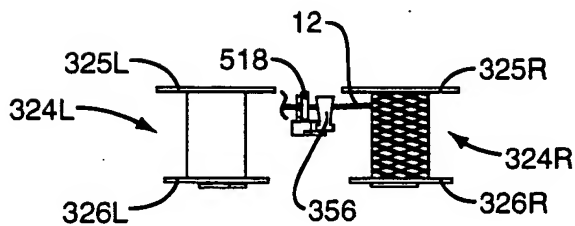 


FIG. 4E

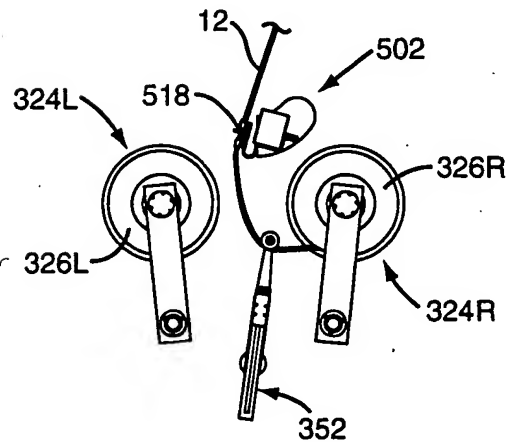 


FIG. 4F

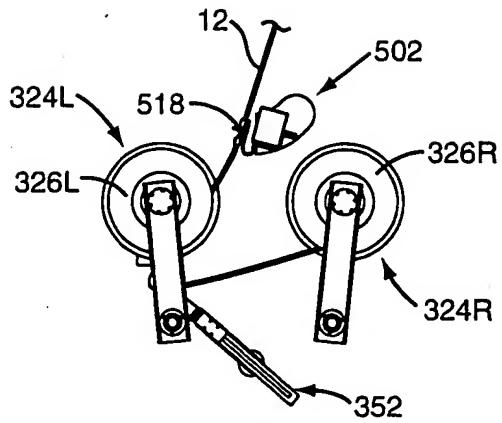 


FIG. 4G

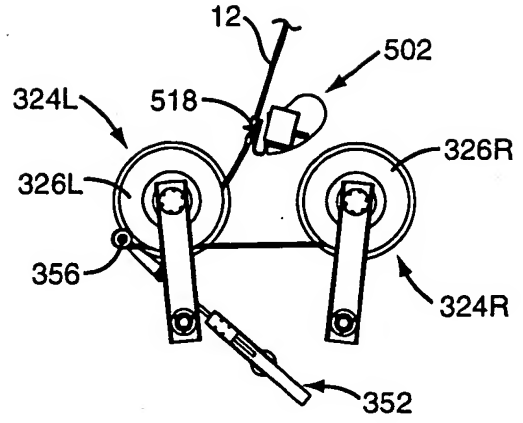 


FIG. 4H

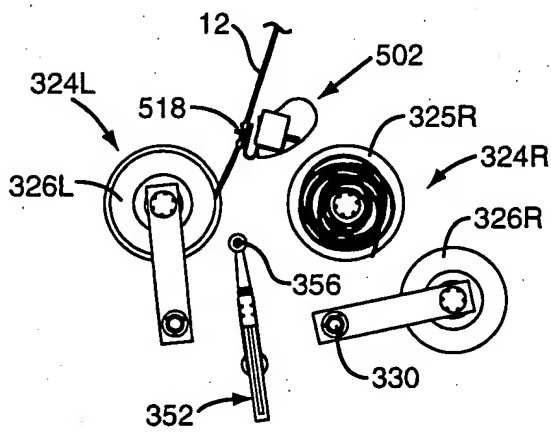 


FIG. 4I

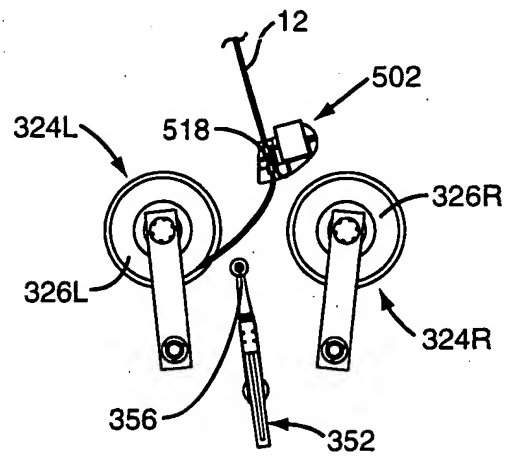 


FIG. 4J

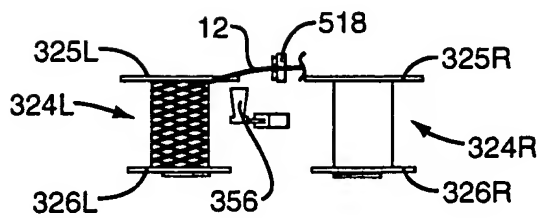 


FIG. 4K

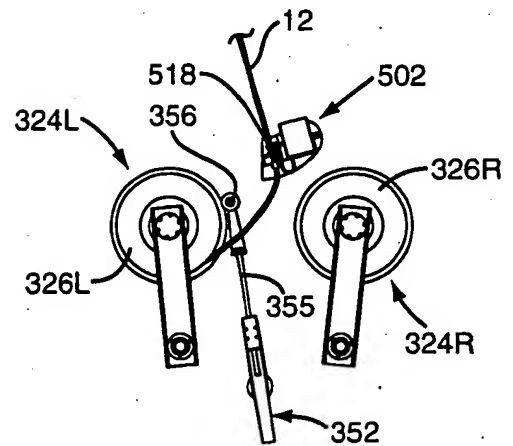 


FIG. 4L

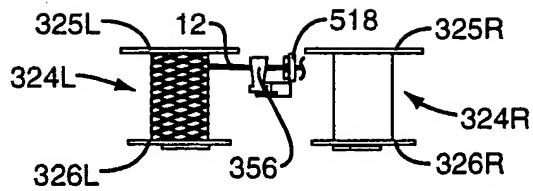 


FIG. 4M

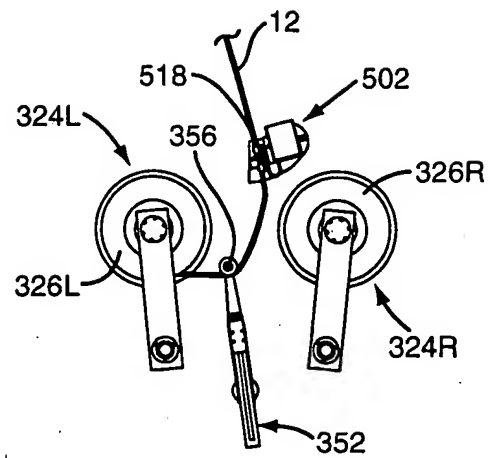 


FIG. 4N

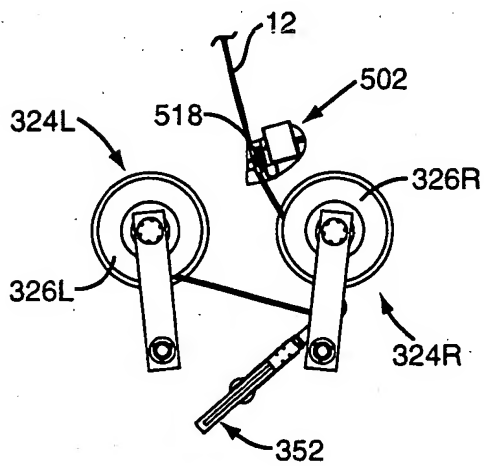 


FIG. 4O

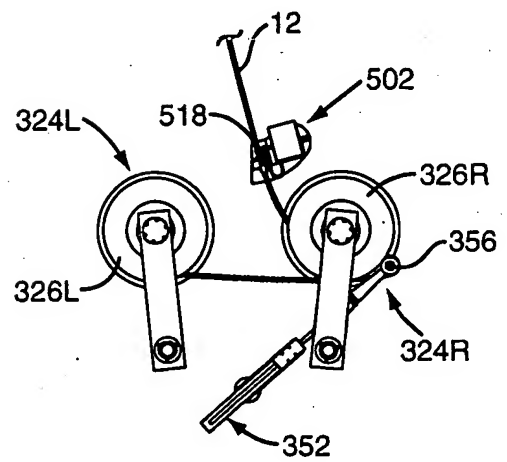 


FIG. 4P

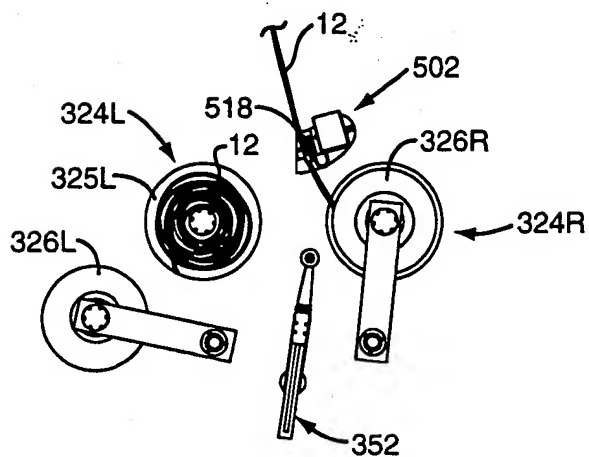 


FIG. 4Q

```
graph TD; 422[WIND WIRE ON MANDREL] --> 424[MOVE WIRE OUT OF WIRE GUIDE EXTENSION PATH]; 424 --> 426[ROTATE TRANSFER ARM TO POSITION INSIDE WOUND MANDREL AND EXTEND WIRE GUIDE]; 426 --> 428[MOVE WIRE INTO POSITION BENEATH WIRE GUIDE]; 428 --> 430[RETRACT WIRE GUIDE, HOOKING WIRE]; 430 --> 432[ROTATE TRANSFER ARM BELOW UNWOUND MANDREL TO POSITION OUTSIDE MANDREL]; 432 --> 434[EXTEND WIRE GUIDE]; 434 --> 436[CLAMP WIRE INTO UNWOUND MANDREL AND CUT WIRE]; 436 --> 400[ ];
```

422 WIND WIRE ON MANDREL

424 MOVE WIRE OUT OF WIRE GUIDE EXTENSION PATH

426 ROTATE TRANSFER ARM TO POSITION INSIDE WOUND MANDREL AND EXTEND WIRE GUIDE

428 MOVE WIRE INTO POSITION BENEATH WIRE GUIDE

430 RETRACT WIRE GUIDE, HOOKING WIRE

432 ROTATE TRANSFER ARM BELOW UNWOUND MANDREL TO POSITION OUTSIDE MANDREL

434 EXTEND WIRE GUIDE

436 CLAMP WIRE INTO UNWOUND MANDREL AND CUT WIRE

FIG. 5

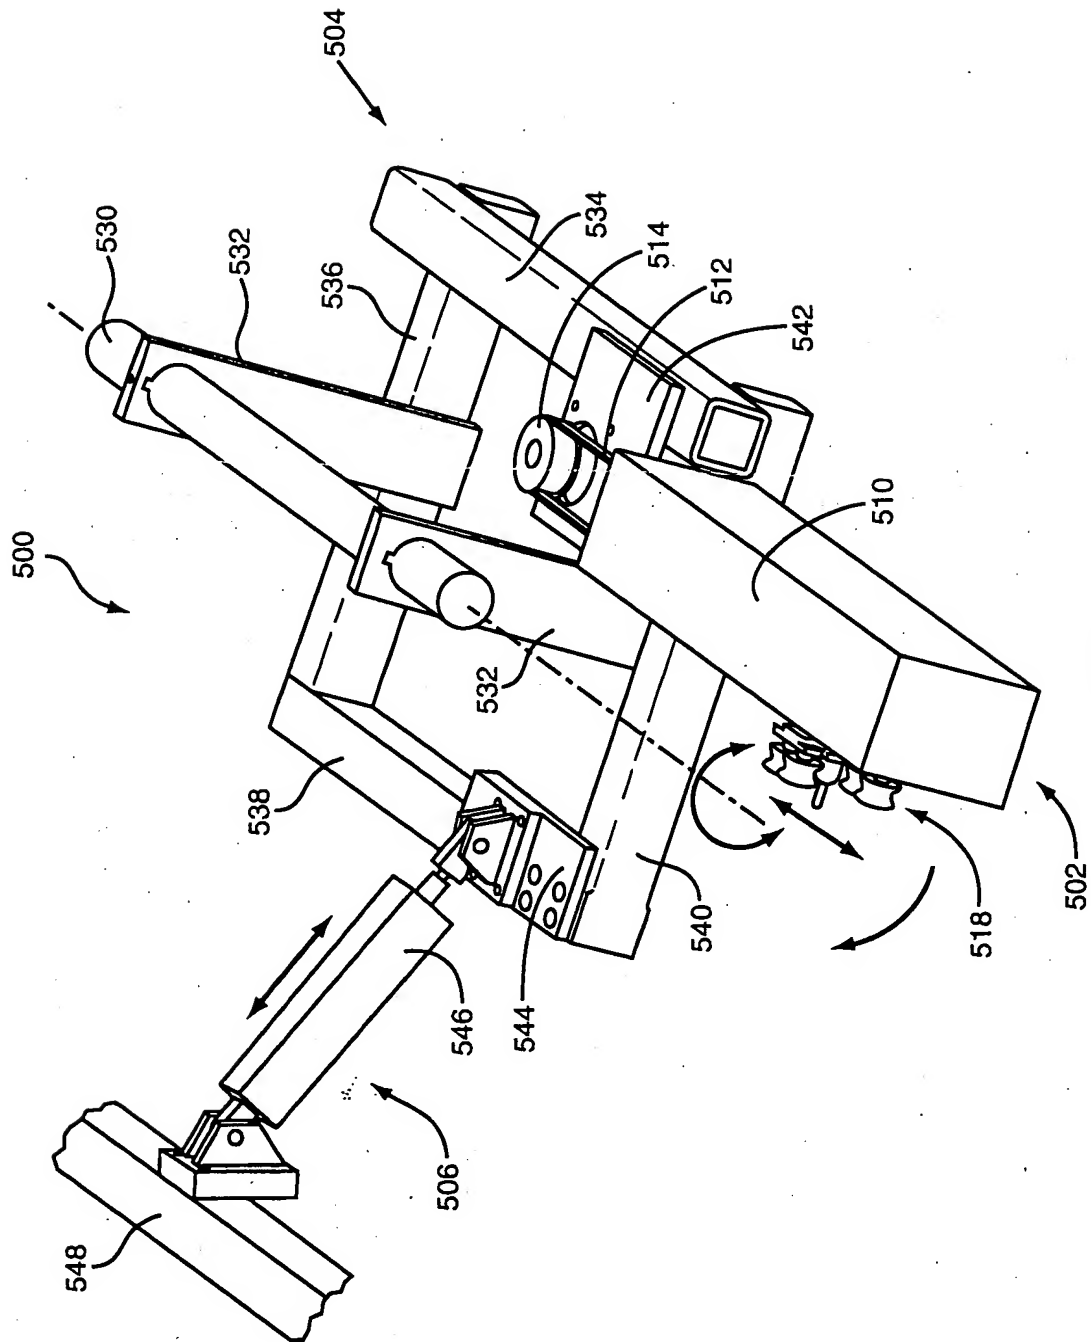 


FIG. 7

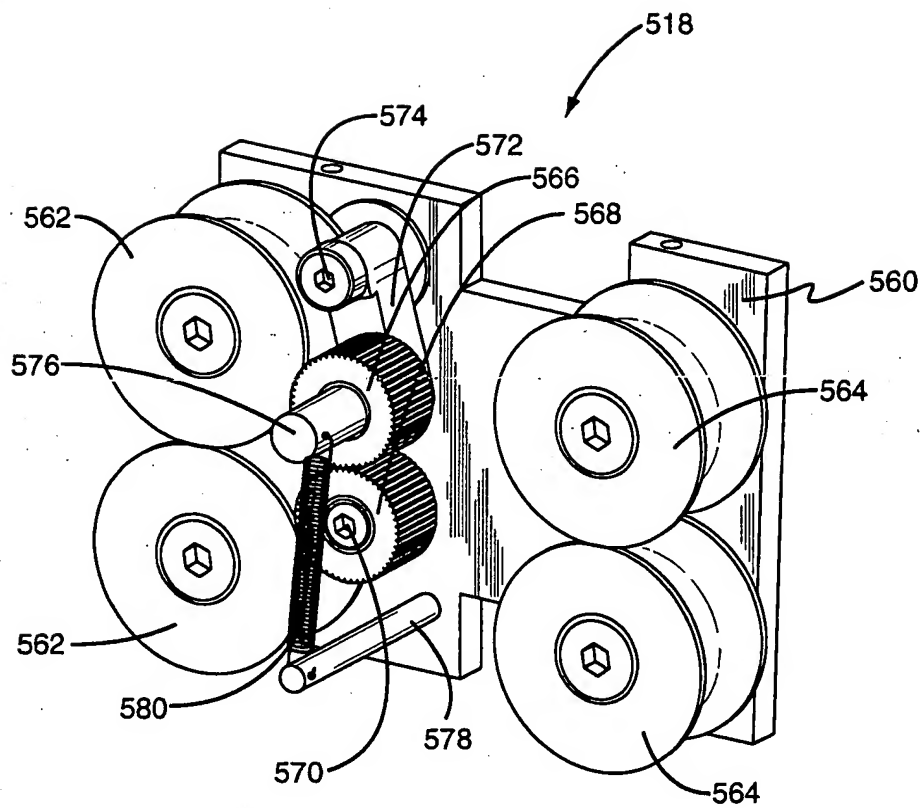 


FIG. 8A

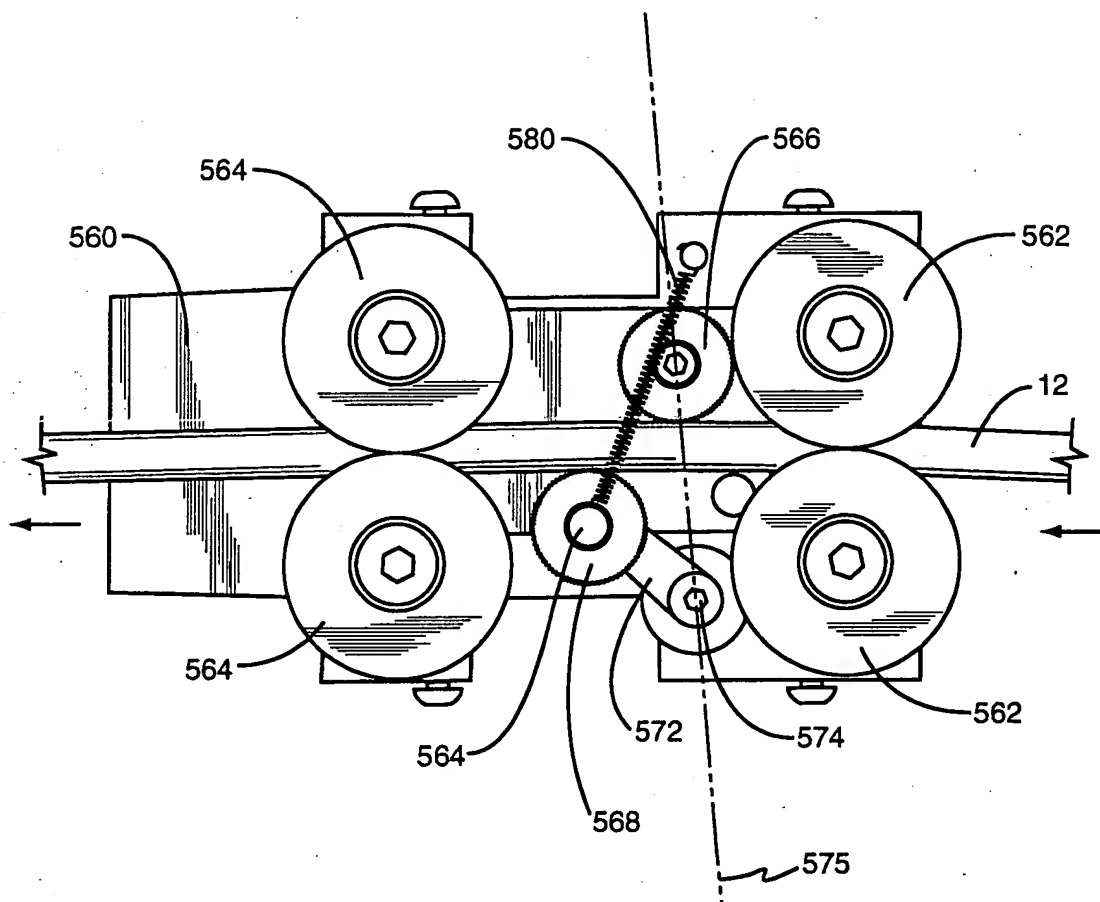 


FIG. 8B

2025 RELEASE UNDER E.O. 14176

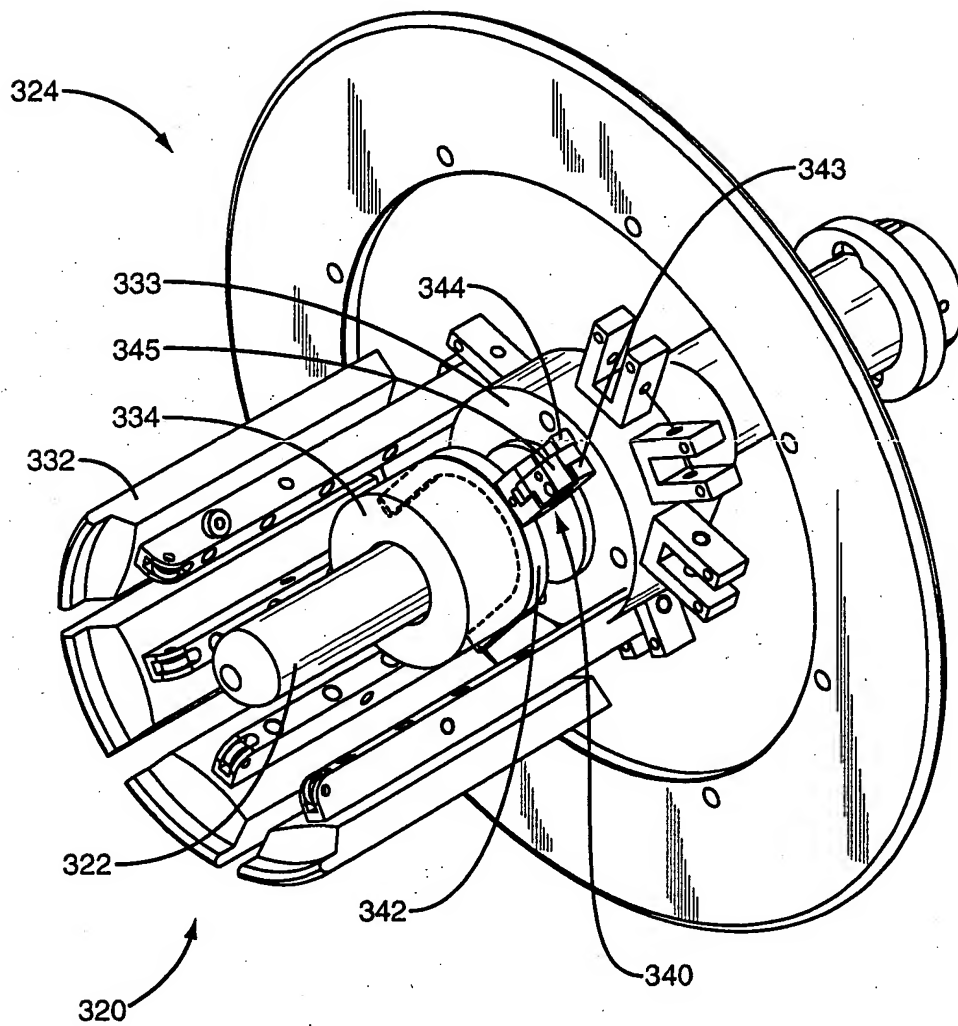 


FIG. 9

10067327 030402

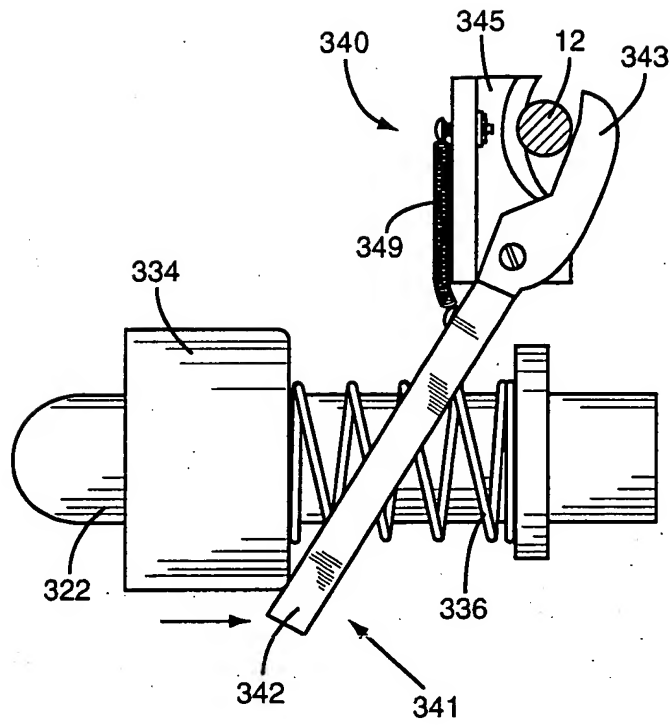 


FIG. 10A

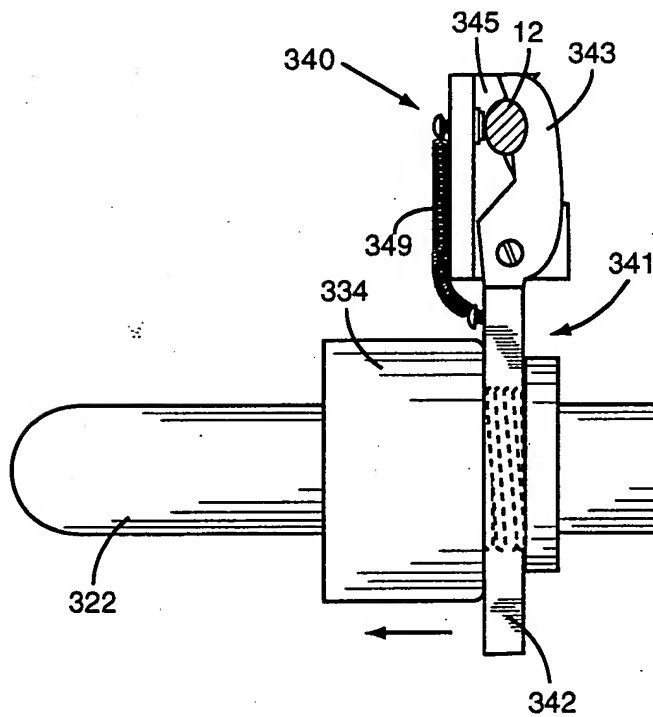 


FIG. 10B

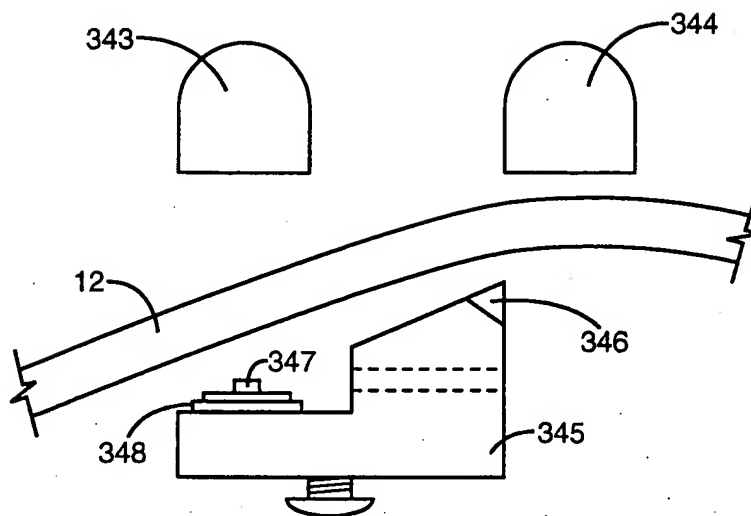 


FIG. 11A

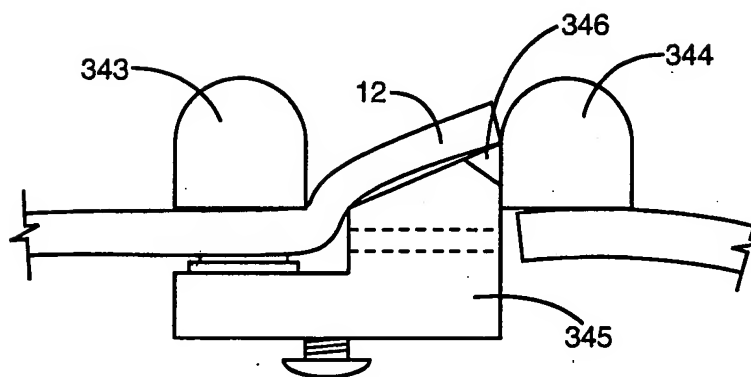 


FIG. 11B

20080732 930402

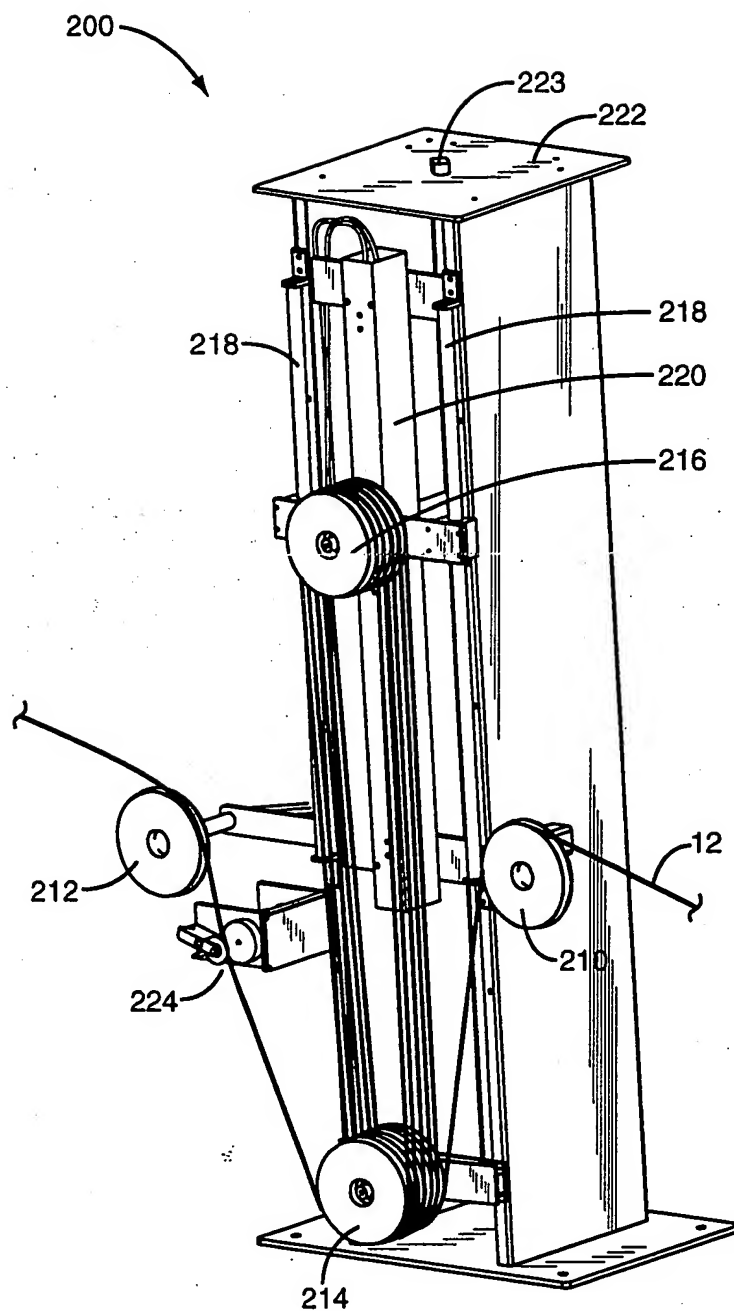 


FIG. 12A

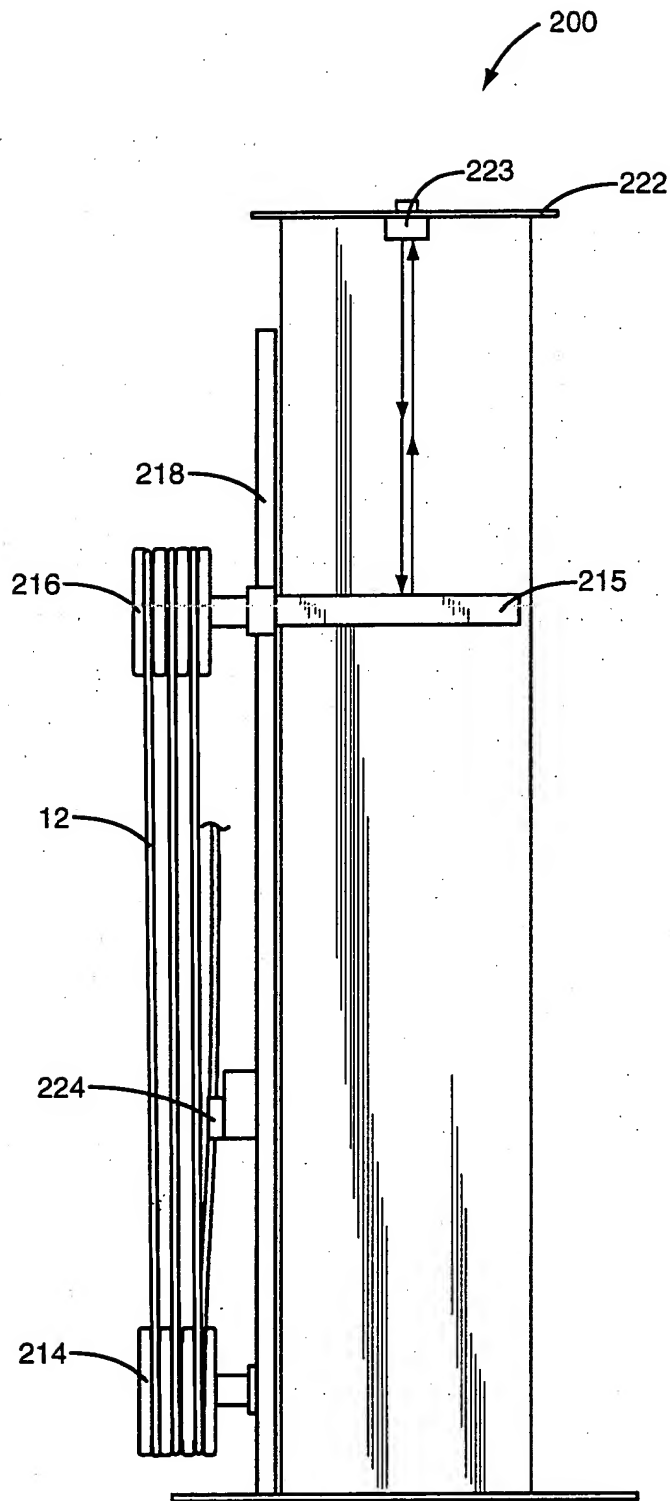 


FIG. 12B

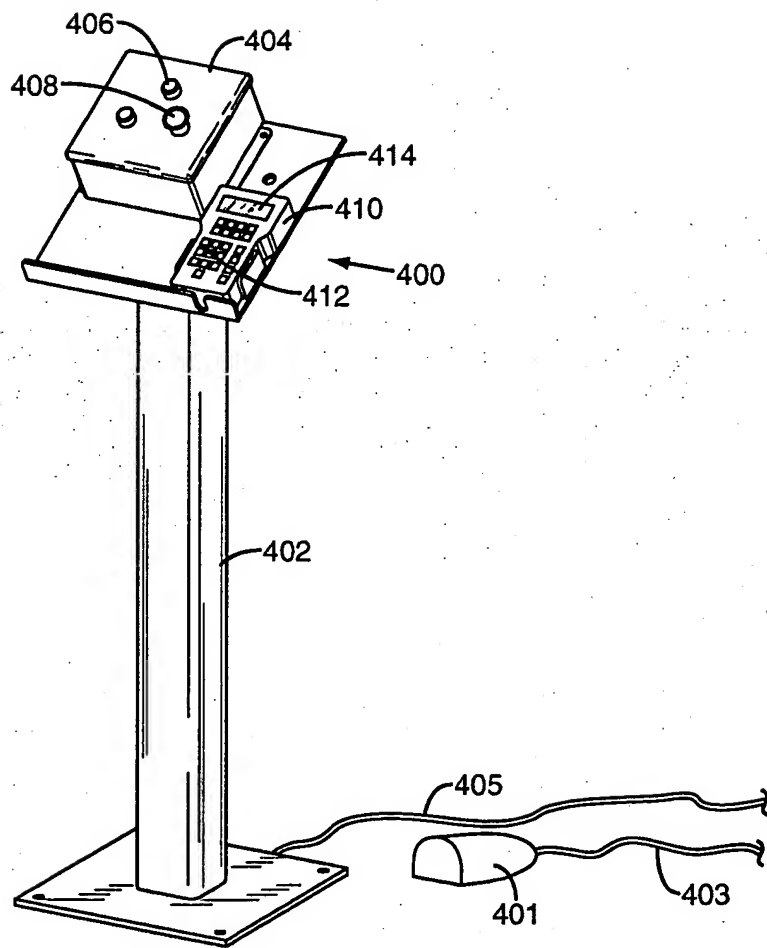 


FIG. 13

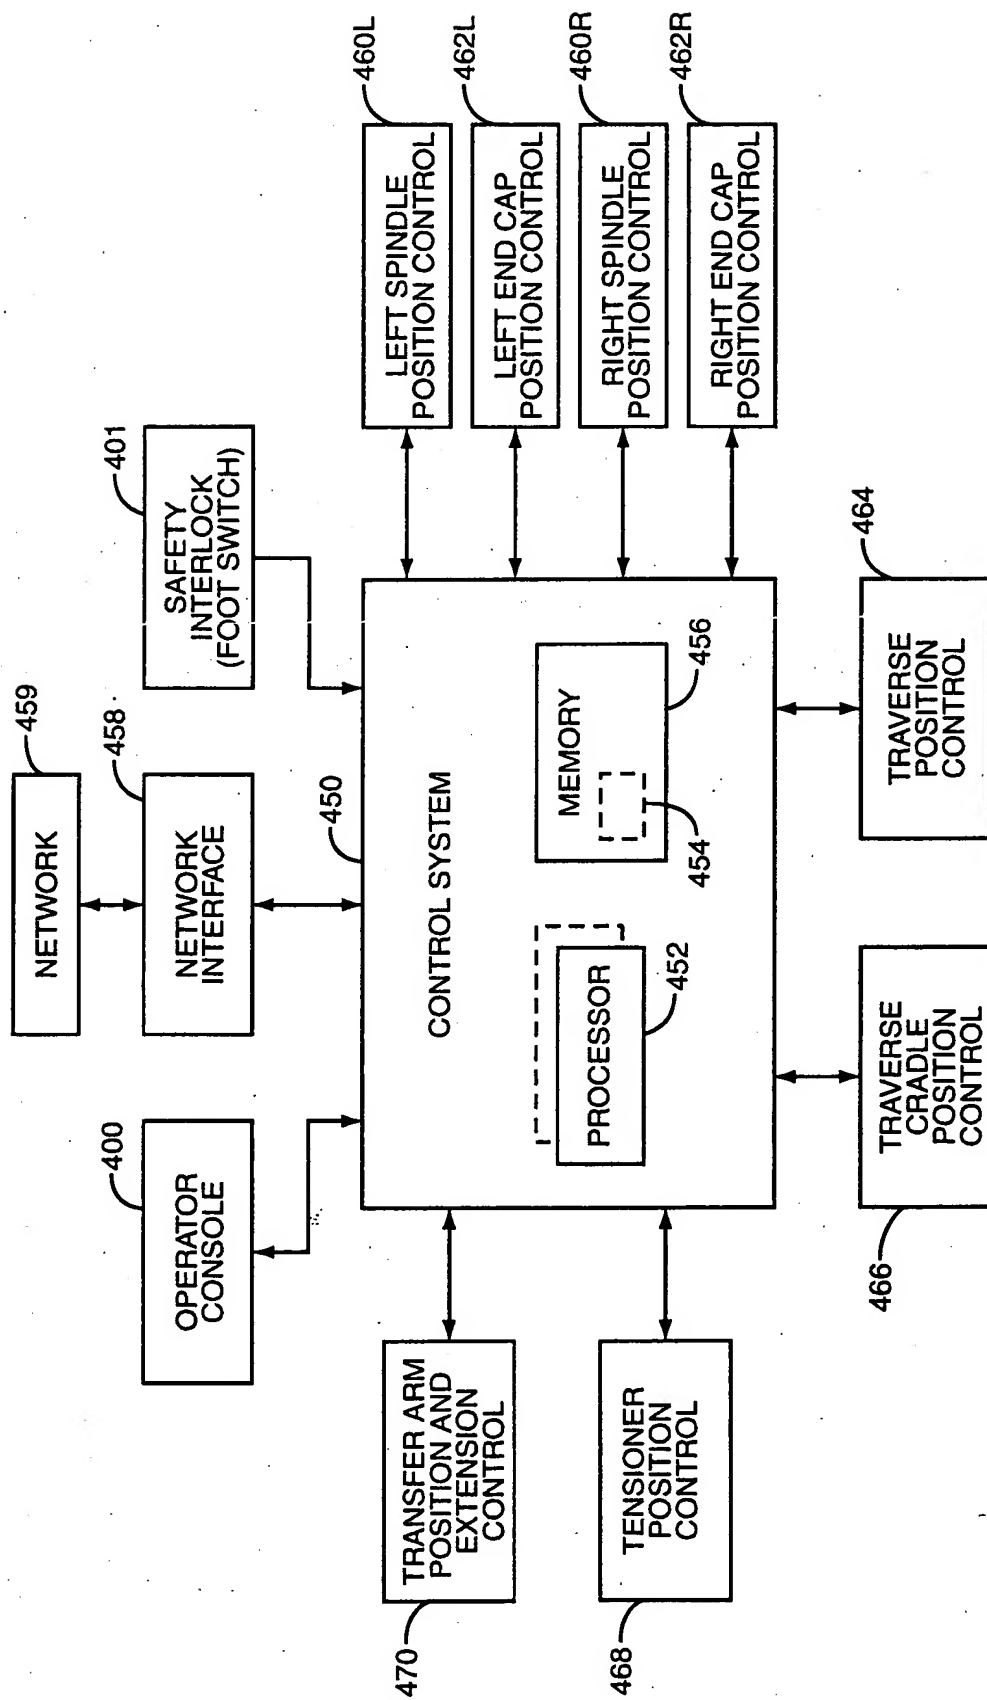 


FIG. 14

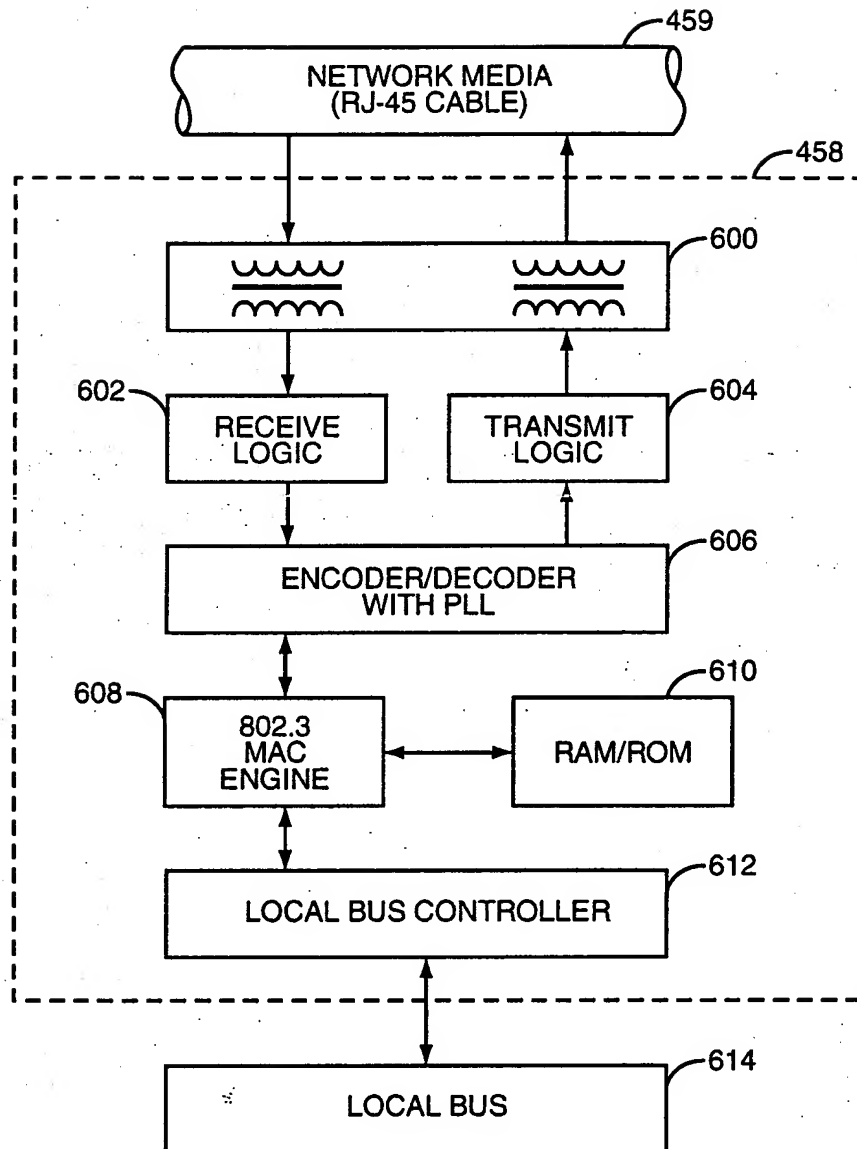 


FIG. 15